

Rinnai

Operation guide

Evolve



Gas fires, like cars, require regular maintenance and servicing. For reliable operation Rinnai gas fires should be serviced every two years, including inspection of the flue system.

Important

Appliance must be installed with a Rinnai approved flue system.

This appliance must be installed in accordance with:

- Manufacturer's installation instructions
- AS/NZS 5601 Gas Installations
- AS/NZS 5263 Gas appliances standards

For use with Natural Gas or Universal LPG as indicated on the appliance.

Appliance must be installed, commissioned and serviced by an authorised person, being in New Zealand a licensed gasfitter, in accordance with these instructions and all applicable local rules and regulations.

Warning

Improper installation, adjustment, alteration, service and maintenance can cause property damage, personal injury or loss of life.

For more information about buying, using, and servicing of Rinnai appliances call: 0800 RINNAI (0800 746 624).

Rinnai New Zealand Limited
105 Pavilion Drive, Mangere, Auckland
PO Box 53177, Auckland Airport, Auckland 2150

Phone: (09) 257-3800
Fax: (09) 257-3899
Email: info@rinnai.co.nz
Web: rinnai.co.nz
[youtube.com/rinnainz](https://www.youtube.com/rinnainz)
[facebook.com/rinnainz](https://www.facebook.com/rinnainz)



contents:

About your Rinnai Evolve	4
Operation using the remote	6
Clearances from combustibles.....	8
General information	9
Care and maintenance	10
Servicing.....	10
Safety.....	11
Abnormal flame pattern	12
Error codes.....	13
Troubleshooting.....	14
Installation checklist.....	16
Installer details	16
Limited warranty	17

About your Rinnai Evolve

Congratulations on the purchase of your Rinnai Evolve gas fireplace. We hope you love this product as much as we do, and on the off chance that something does go wrong, or if you need help, we're only a phone call away.

Frame options to suit

Interchangeable frame options to suit different installations and decors.



Error display window

Sits on the top fold of the outer frame along with the filters.

Infra-red remote receiver window and ignition indicator

Will beep when it receives a signal from the remote and flash green during the ignition process.

Manual control panel on the side of the unit

The control panel is located on the top left corner of the outer frame. The control panel houses the ON/OFF button and also the LED indicator. This lets you know what the unit is doing. For example:

- Standby = LED is red
- Power disruption = LED flashes red

Infra-red remote control

The remote emits an infra-red signal. It must be aimed at the receiver window. Normal operating range is up to 7 m. Please note; range can be affected by the angle at which you are aiming the remote.

Some fluorescent lights may interfere with the transmission of the remote signal—change your operating position if this occurs.



How the Rinnai Evolve starts

This gas fire has a sealed combustion chamber that requires purging before gas can flow and the unit can start. This means the combustion fan will start several seconds before the fire ignites.

Ignition sequence:

1. When the On/Off button is pressed on the control panel, the infra-red receiver window will pulse green.
2. The ignition sparker will operate, and as soon as a spark is sensed gas will flow to the main burner.
3. When the main burner establishes a flame, the heater will automatically modulate between the burner settings to achieve and maintain the default set temperature of 22 °C*.

Do not unplug or turn off the mains power supply to the fire as this will stop the convection fan from cooling down the unit. The convection fan operates for several minutes after the fire has been turned off.

Power cut or power disruption

If the power is disrupted while the Evolve is operating, once the power has been restored the fire will go into power failure mode, the LED indicator will flash red, and there will be flashing zeros in the error display window in the lower left hand side of the frame, refer image on p. 13. The error will show through two narrow cutouts—you will need to walk up to the fire and look down to see these.

To reset the fire, press the On/Off button on the control panel or remote control twice to turn the fire back on.

Position of your Rinnai Evolve on a wall

The Evolve looks and performs best when installed close to the floor. If the unit is installed higher up the wall the movement of air from the convection fan, depending on the room configuration, could create draughts.

Wall surface above the fire

The temperature of the wall surface directly above the appliance may get warm and discolour paint finishes or distort vinyl wall coverings. For durability of surfaces, please contact the manufacturer for their specification.

* The Evolve modulates the flame and heat output to try and maintain the default temperature setting of 22 °C. If the room temperature starts to climb above 22 °C the Evolve will modulate to it's lowest flame and fan setting, but will not turn off. Depending on the size of the room this could mean the room temperature could steadily rise.

Operation using the remote

For the remote control functions to be available, the appliance On/Off button must be in the On position.

Signal transmission to the unit

The unit will beep and flash to confirm the settings have been received from the remote.

Lost or misplaced remote

If you misplace the remote the fire can still be used, albeit in a limited capacity, by using the power On/Off button on the lower right hand corner of the outer frame. The fire will automatically modulate between flame settings to maintain the default set temperature of 22 °C.

Remote - safety



WARNING


Keep the remote away from young children. Also ensure they can't access the batteries—they can become a choke hazard and potentially life-threatening if swallowed.

Breakage of the plastic housing could expose sharp edges—replace the remote if this occurs.

Avoid getting the remote wet as water entry will damage the remote.

Batteries

The remote uses two Lithium cell CR2450 batteries. Never mix old and new batteries. The remote will be supplied with the batteries already inserted, pull the clear tab to activate (OH, meaning OK, will flash on the display). This will also occur when the batteries have been replaced.

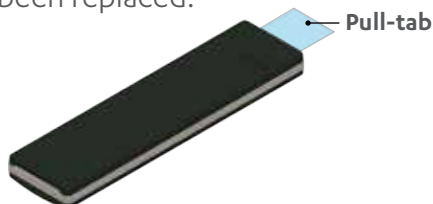


Remove the batteries if the remote is not going to be used for a long time. This will help avoid damage from leaking batteries. If leakage has occurred the remote will need to be replaced as leaking chemicals could be a risk if touched or ingested.

Changing the batteries

• Remove the back


Slide your fingernail under the bottom corner and along the base, and gently pry apart. With some coaxing the cover will pop off. Patience required, remember it's designed so little fingers cannot easily access the batteries.

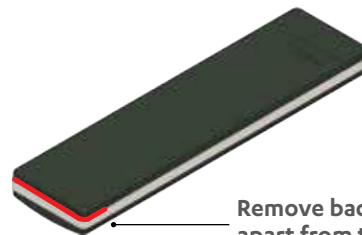

Remove back cover by prising apart from the bottom first

• Unscrew the black retaining bridge

Undo the two small screws holding the black retaining bridge between the two batteries.

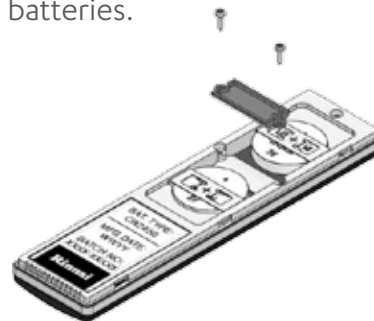

• Replace the batteries

The batteries can only be inserted one way—printed side facing up as shown on the next page. The battery contact edges can be sharp, take care when replacing the batteries.

• Replace the black bridging plate

Ensure you replace the black bridging plate as this will reduce the risk of young children getting access to the cell batteries.

Flame and heat setting

Once the fire is turned on the flame setting defaults to level five (on high). Use the up and down buttons to control the height of the flame and heat output.

The relationship between the flame height and fan speed is preset and cannot be adjusted. The fire has five flame and fan settings:


Flame height	Fan speed
1	low
2	low
3	low
4	high
5	high



Turning on and off

This button switches the fire on and off. For it to work the power button on the fire must be ON.

Room temperature display

Displays the room temperature* (at the point of the remote) and low battery symbol if the batteries need changing. 

The back light will stay on for approximately five seconds. Constant activation will shorten battery life.

* Checks the room temperature every minute.

Black retaining bridge

Safety device that needs to be removed before replacing the batteries—DO NOT DISCARD, this MUST BE put back on.



Pry point for removing the back cover

Gently pry open the back cover from the base of the remote



Battery retainer

Temperature sensor position

The room temperature is determined by a temperature sensor located in the bottom of the remote. Please be aware the sensor will be affected by direct sunlight, draughts, and body temperature (your hand).

Clearances from combustibles

The clearances listed below, measured from the **edge of the glass**, are minimum clearances unless otherwise stated.

While the heater is operating

The appliance must not be installed where curtains or other combustible materials could come into contact with the fire. The 400 mm side clearance includes side walls. The 1000 mm clearance is in front of the fire.

Floor protection

Heat emanating from this fire may over time affect the appearance of some materials used for flooring, such as, carpet, vinyl, cork or timber. This may be amplified if the air contains cooking vapours or cigarette smoke. To avoid this occurring, it is recommended that a mat be placed in front of the appliance.

Mantels and surrounds

Combustible mantels and surrounds require clearance from the unit to minimise the risk of fire. Mantels and surrounds, made of combustible materials such as wood, are allowed providing they are outside the minimum clearances shown.

Hearths



A hearth is not necessary but can be used for decorative purposes or protection of sensitive flooring if required. A hearth must not obscure the front of the fire or obstruct the fire in any way (including the frame around the fire).

TV installation above the fireplace

The Evolve has a fan that distributes warm air from the top of the appliance out into the room. As warm air is dispersed outwards, as opposed to directly upwards, installation of a TV may be an option.

Generally the bottom of the television recess should be at least 400 mm above the fire. Please check with the television supplier to check clearances. Some television manufacturers have warranty conditions that state a television is not to be installed above a fireplace.

For further information, please contact Rinnai or refer to the installation guide, which includes a TV installation diagram.

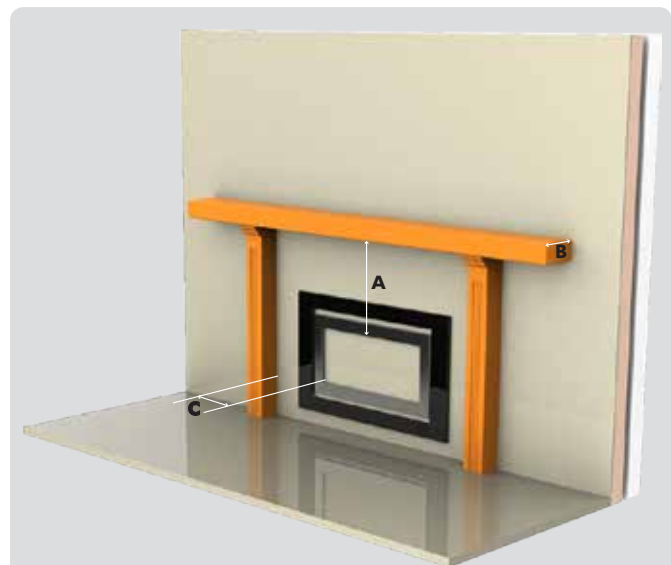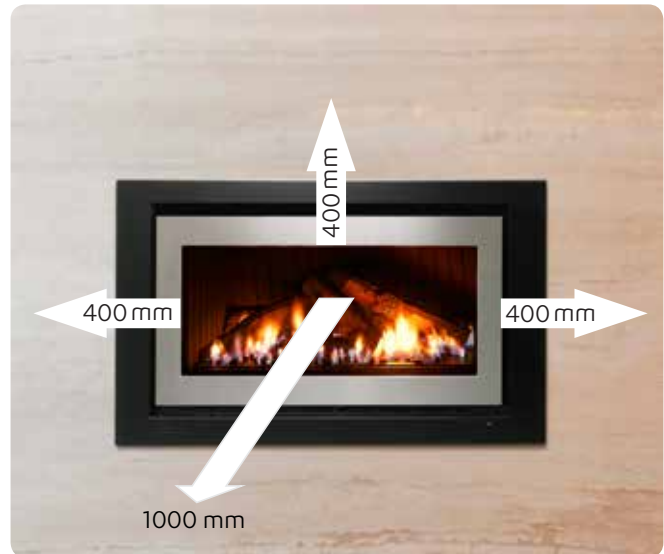

- A** Mantel needs to be a min. of 400 mm away from the edge of the glass.
- B** Max. mantel depth at 400 mm (A) is 250 mm max.
- C** Surround needs to be a minimum of 400 mm away from the edge of the glass.

For every 50 mm of added mantel depth there must be an additional 100 mm of clearance from the edge of the glass. For example:

MANTEL DEPTH	A: CLEARANCE REQUIRED
300 mm	500 mm
350 mm	600 mm
400 mm	700 mm

General information

Before operation please read these instructions to get an overview of how to operate, maintain and service your Rinnai gas fire.

Electrical connection

The Evolve is fitted with a 1.5 m power cord and 3-pin plug. The power cord passes through a slot in the back left hand corner of the appliance.

The connection is either direct wired* or connected to a power point within the cavity. This must be connected to a dedicated earthed power point. The electric isolation switch must be accessible after the appliance has been installed.

The fire must not be located immediately below a socket outlet (potential fire hazard).

If the supply cord is damaged, it must be replaced by a licensed tradesperson. This must be a genuine replacement part available from Rinnai.

Installation by a licensed tradesperson

Only a licensed tradesperson can install, adjust, maintain, and service this gas fire. Any work carried out by a non-licensed tradesperson is illegal and will void any warranty.

Installer handover

Ensure your installer talks to you about the use and care of this appliance, and that you understand these instructions. The installer also needs to complete the appliance installation checklist and installer details, and leave this guide with you.

Safety devices

Your Rinnai Evolve has the following safety devices; flame failure sensing system, pressure relief, overheat safety switch, air temperature sensor, thermal fuse, overcurrent fuse, and a spark detector.

Soot deposits

Small soot deposits inside the heater or glass is normal. Significant soot build-up however is not normal and will require a service call. Refer to the troubleshooting section for further information.

Environmental

The Rinnai Evolve is manufactured from a number of recyclable materials. At the end of its useful life please consider what parts could be recycled, for example scrap metal.



* Consult a qualified electrician if direct wiring is required as it must comply with AS/NZS 5601 and AS/NZS 3000 and other relevant local regulations

Care and maintenance

All external surfaces of the heater can be cleaned using a soft damp cloth and mild detergent. Do not use solvents and do not attempt to clean the heater while it is hot or operating.

Filters

The filters for this appliance are fixed to the inlets of the room air return. The build up of dust or other particles on these filter strips reduces the air flow through the heater, reducing the efficiency, which can cause the appliance to shut down. To stop this from occurring the filters will need regular cleaning.




Clean the filters with either a vacuum cleaner, a soft dry cloth, or a soft brush. NEVER attempt to clean filters with water.

Filter blockages

When a build up is detected the blockage LED, located by the infra-red remote receiver window, will begin to flash. Once the indicator is flashing, if no action is taken, the heater will shutdown to avoid overheating and error code 14 will be displayed in the error display window.

Returning the appliance to normal after a shutdown

1. Press the ON/OFF button once to turn off.
2. Clean the filters.
3. Press the ON/OFF button once to turn on.
4. Use the remote to resume normal operation.

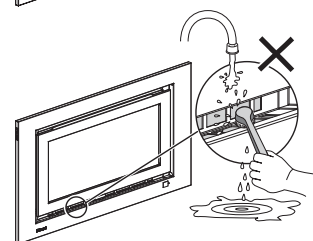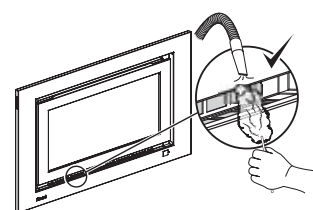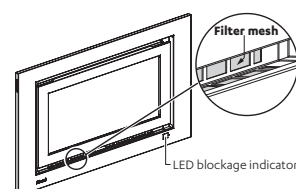

Servicing

Rinnai has a maintenance, service and spare parts network with personnel who are fully trained and equipped to give the best advice on your Rinnai appliance.

Servicing and repair should only be carried out by authorised personnel.

If your appliance needs maintenance or servicing, please call Rinnai (0800 746 624).

For reliable operation Rinnai gas fireplaces should be serviced every two years, including inspection of the flue system. If they are in a particularly dusty environment or subject to excess lint, for example dog hair, or where there are newly laid carpets, then annual servicing would be beneficial.

Regular maintenance and servicing is not covered by the Rinnai warranty.

Do not attempt to carry out any service work other than that mentioned in the troubleshooting section. If you have any other faults or problems, please refer to your installer or contact Rinnai.








Safety

Important

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

- The heater must not be used or operated if any part of the appliance is damaged
- Do not place articles on or against this appliance
- Do not use or store flammable materials near this appliance
- Do not spray aerosols in the vicinity of this appliance while it is in operation
- Do not modify this appliance

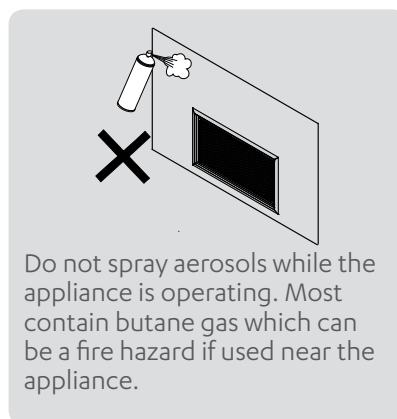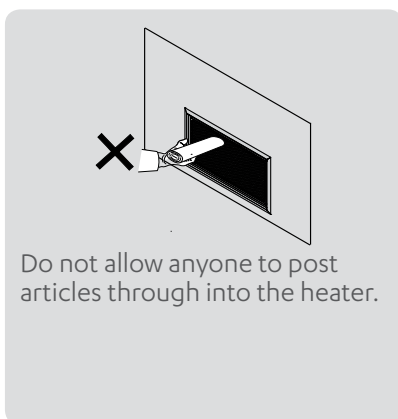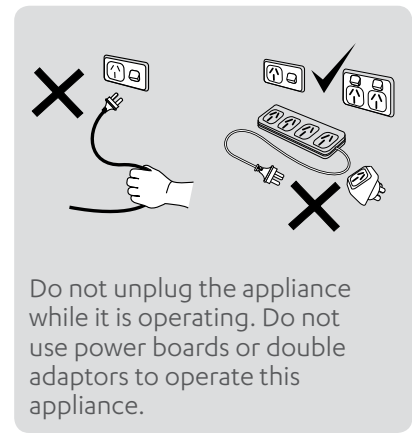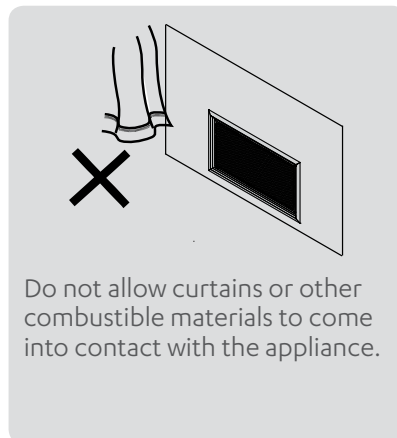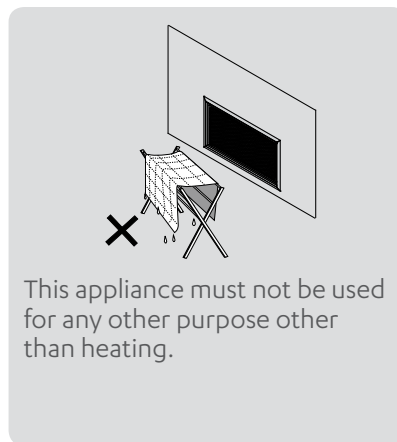

Abnormal flame pattern


Each Rinnai flame fire has a distinct flame pattern. This should look the same every time you start your fire, after an initial warm up period of approximately 20 minutes.

Abnormal flame performance and/or pattern can indicate a problem with your fire, such as blocked gas injectors, or shifting of burn media.

There are some warning signs that could indicate a problem.

- Unusual smell from the appliance
- Continued difficulty or delay in establishing a flame
- Either very short or very long flames
- Flame only burns part way across the burner
- Severe soot building up on the inside of the glass¹.

If any of the above signs occur, please contact Rinnai.

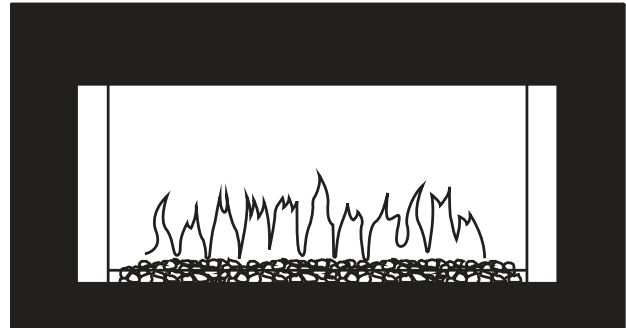

Normal flame pattern



Abnormal flame pattern

¹ Appliances incorporating a live fuel effect, and designed to operate with luminous flames, may exhibit slight carbon deposits—this is normal.

Error codes

The Evolve has self diagnostic electronics that monitor the appliance during start up and operation. Should a fault occur the heater will shut down. The fault that has caused the shut down will be indicated by a pair of flashing numbers in the error display window as shown below. You will need to walk up to the fire to see these.

Error code	Likely cause	Suggested solution
00	Mains power failure	Reset the fire, press the On/Off button on the control panel or remote control twice to turn the fire back on.
11	Ignition failure	Check the gas supply is turned on. Turn the heater OFF then ON again. If the problem continues a service call will be required.
12	Incomplete combustion	As above.
14	Overheat safety device	Filter may be blocked, refer p. 10. If not rectified a service call is required.
16	Room overheat	Lower room temperature to below 40 °C.
31	Room temperature sensor faulty	Service call.
32	Overheat temperature 1 sensor faulty	Service call.
33	Overheat temperature 2 sensor faulty	Service call.
53	Spark sensor faulty	Service call.
61	Combustion fan motor faulty	Service call.
70	Model error	Incorrect PCB for model, service call.
71	Solenoids faulty	Service call.
72	Flame detection circuit fault	Service call.
73	Communication error	Service call.



Looking down at the error display window—sits underneath the filter

Troubleshooting



Check the following information before making a service call as some performance characteristics of the fire are a normal part of operation. If you are still unsure or concerned after reading this section, please contact Rinnai on 0800 746 624.

During installation there will be an initial burning in period where some smoke and smell may be experienced, this could last for a couple of hours— this is a normal part of the operation.

The appliance is fitted with an overheat safety switch which will shut off the appliance. If the appliance shuts off repeatedly servicing may be required.

Using the heater for the first time, or after a long period of non use

Ignition may not occur the first time it is operated due to air in the gas pipes. If ignition does not occur the unit will switch off automatically. Try operating the heater again if this occurs.

The heater may make noises after ignition or switching off. This is due to the expansion and contraction of the internal components—this is normal. The heater will not ignite if the On/Off button is pressed straight after the heater has turned off. It will take approximately 20 seconds before the unit will switch on again.

What's happening	Explanation and/or possible solution
Unusual smells	
Smoke or strange smells are produced when first operating the appliance after installation.	This is caused by grease, oil, or dust within the appliance. This will stop after a couple of hours.
Smell of gas	Have you been painting? Have new carpets been laid? Have you been cooking with spices? If yes to any of the above, then this is normal as these odours will mix with the warm air to emit an unusual smell—this will dissipate over time. There could be a leak. Turn off the gas at the meter or LPG cylinder and call your installer.
Unusual sounds	
Clicking noises when the heater starts or stops, or changes to a higher or lower setting.	This is expansion and contraction of the heat exchanger and is a normal part of operation.
Clunking noise when the thermostat operates.	This is the sound of the gas valve opening and closing to regulate the flow of gas.
Soot marks and condensation on the glass	
Small soot deposit on logs or stones.	Normal operation, no action required.
Severe soot deposits forming on logs, stones, or glass	Inadequate flue system, incorrect gas pressure or incorrect installation of burn media. Contact a Rinnai Service Centre.
Condensation and/or water marks on the glass	Normal operation. Condensation should disappear once the fire has warmed up.

What's happening	Explanation and/or possible solution
Performance problems	
Warm air not coming from heater when it starts	The fan starts automatically after a short delay. This is to allow the appliance to warm up, helping avoid cold draughts.
Fan continues to run after the heater is turned off.	This is to remove residual heat from within the appliance. This stops once the unit cools down.
Fire will not light when switched on	Ensure the power cord is plugged in and turned on. Ensure gas supply is turned on.
Unit stops during operation	Possible power failure, or gas supply may have been turned off.
Unit is on low and the LED is on	Obstruction detected. Something may be too close to the warm air vent, remove and use the remote to resume normal operation.
Remote problems	
Remote control doesn't work	Unit not plugged in properly or has been turned off—plug in power cord or press On/Off button.
	Remote lock-up due to signal being out of range, incorrectly aimed at unit or obstructed.
No display on remote.	Batteries may be flat, change batteries.
Possible error codes* on remote when batteries are activated or changed:	
F1 displays on remote	Assembly fault, remote will not respond to movement—accelerometer not communicating with the main processor correctly. Contact Rinnai.
F2 displays on remote	Room temperature outside 5-45 °C, or temperature sensing circuit has failed, which may indicate an assembly fault. Contact Rinnai.

* Unlikely to occur, but possible if there has been an assembly fault or failure with the remote.

Installation checklist

The installer must complete the installation checklist below and make sure this guide is left with you. They must also instruct you about the use and care of the appliance, and ensure you understand the safety instructions.

Checklist

- Appliance positioned in a suitable location (clearances, mantels, surrounds etc.).
- Rinnai flue system installed and tested to ensure effective draw.
- Gas pressure checked and set according to the data plate.
- Burn media installed as per instructions.
- Appliance tested for correct operation and to ensure no gas leaks.
- Customer instructed on operating procedure and safety requirements.
- Customer advised to service the heater every two years.

Installer details

Company name:

Installer name:

Address:

Phone:

Mobile:

Certificate of compliance number for installation:

Signed:

Date:

Limited Warranty

Rinnai brings you peace of mind with a:

2 Year minimum warranty



Terms and conditions

1. During the 24 month period from date of purchase and subject to clauses 2 and 3 below, Rinnai New Zealand Limited (“Rinnai”) will, at its own discretion, either replace or repair any defective product at no charge to the customer.
2. This warranty covers manufacturing defects only. This warranty will not apply if (for example) the product has been improperly installed or is otherwise installed contrary to manufacturer’s recommendations, has been damaged during or after installation, has not been operated in accordance with operating instructions, or has been subjected to damage or abuse beyond that expected from conditions of normal use.
3. Warranty claims may be invalid if not accompanied by details of the installing or supervising gas fitter’s registration number and the gas fitting certification number.
4. This warranty commences from the date of purchase. Proof of purchase is required at the time of any warranty claim.
5. Servicing of the product is to be carried out by a Rinnai authorised service centre.

All Rinnai appliances meet or exceed the safety standards required by New Zealand gas and electrical regulations. The company is constantly improving its products and as such specifications are subject to change or variation without notice.

Purchase details

Record your purchase details below

ATTACH YOUR PROOF OF
PURCHASE HERE:

Retailer:

Retailer address:

Date of purchase:

Product details:

Please keep these details in a safe place for future reference.

Register your Evolve online

Register your Evolve online at www.rinnai.co.nz/register/



Rinnai

Home Sweet Home

Give your product a place to call home and WIN!

The graphic features a dark background with white line-art illustrations of Rinnai products: a water heater on the left, a wall-mounted heater on the right, and a floor-standing heater at the bottom right. In the bottom left corner, there is an illustration of a gas torch and a brush. The central text is framed by a house-shaped outline.

*a touch.
of magic*



Experience our innovation

Rinnai.co.nz | **0800 746 624**

<http://www.youtube.com/rinnainz>

Evolve 952/1252 Operation Guide: 13116-A 01-17