# **Torsion® Shower**

SHOWERS SHW

# Product

• Torsion Alcove In-swing Shower Doorset



### Kohler Code

900mm LH	46000A-LL-SHP
900mm RH	46000A-LR-SHP
1000mm LH	46001A-LL-SHP
1000mm RH	46001A-LR-SHP
1200mm LH	46002A-LL-SHP
1200mm RH	46002A-LR-SHP

# **Shower Size Options**

- 900mm
- 1000mm
- 1200mm

# **Included Components**

- Torsion shower door
- Twist handle
- Glass aftercare pack

#### Features


- 8mm toughened safety glass (AS/NZS 2208 compliant) coated with premium Kohler CleanCoat<sup>™</sup>.
- Anodised aluminium frame, 2000mm height

### Acrylic Package Options (NZ only)

	Flat Wall	Contour Wall
9x9 LH with tray© & wall	702078A-LL-SHP	704630A-LL-SHP
9x9 RH with tray© & wall	702078A-LR-SHP	704630A-LR-SHP
1x1 LH with tray© & wall	702077A-LL-SHP	704629A-LL-SHP
1x1 RH with tray© & wall	702077A-LR-SHP	704629A-LR-SHP
12x9 LH with tray© & wall	702076A-LL-SHP	704628A-LL-SHP
12x9 RH with tray© & wall	702076A-LR-SHP	704628A-LR-SHP

© Tray with Centre Waste position

# **Technical Details**

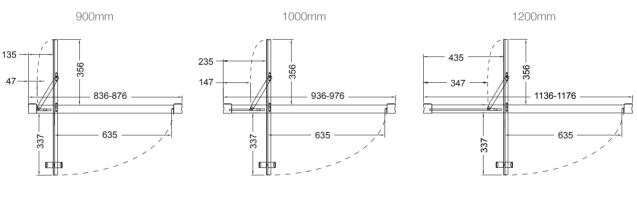

\*Right hand doors shown

#### **Installation Notes:**

- Doors are handed\*, denoted by the side that the handle is on when standing in front of the enclosure.
- The door retracts into the enclosure ensure the door swing arc is not obstructed.
- Door installation requires double studs in the wall framing.
- 8mm glass is very heavy and requires a two-person install.
- Wall retainers must be installed onto the waterproof membrane prior to tiling.

Australia www.kohler.com.au New Zealand www.kohler.co.nz

Sizes are approximate. All measurements shown are in millimetres. Aug 2018 1296245-A04-D

