
EASYNICHE

RECESSED TOWEL WARMER 1200 x 600

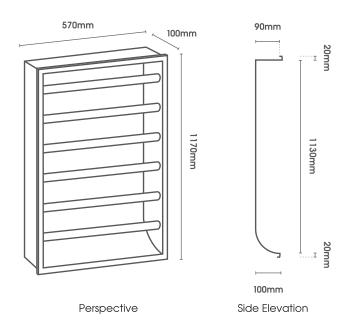

INSTALLATION STEPS:



Overview only. See installation instructions for correct method.


SPECIFICATION

- Fits into a 90mm wall cavity.
- Electrical components must be installed prior to wallboard.
- Supplied with installation materials.



EASYNICHE

RECESSED TOWEL WARMER 800 x 600

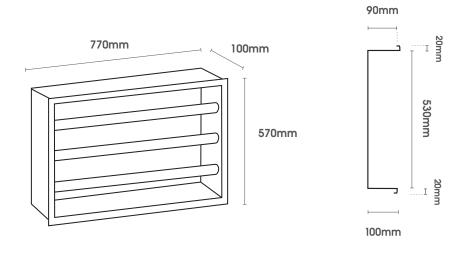

INSTALLATION STEPS:

Perspective



Side Elevation

Overview only. See installation instructions for correct method.

SPECIFICATION

- Fits into a 90mm wall cavity.
- Electrical components must be installed prior to wallboard.
- Supplied with installation materials.

